 
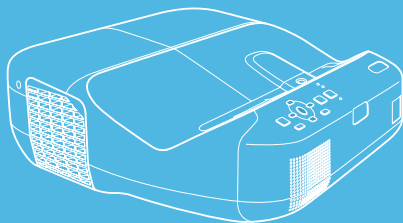 
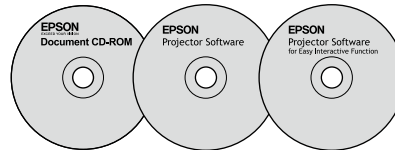 
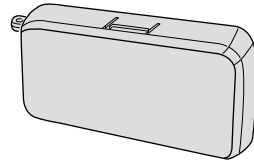 
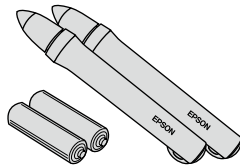 
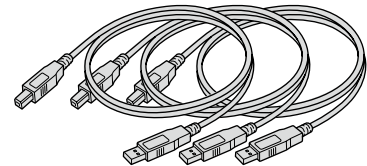 
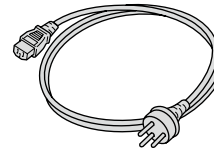 
 
 
 
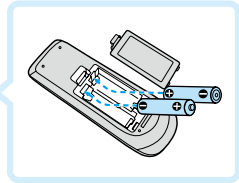 


Multimedia Projector



EB-1410Wi EB-1400Wi

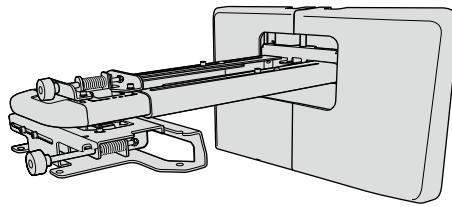









EN	Quick Start Guide	ET	Lühijuhend
DE	Kurzanleitung	LV	Ātrās darba uzsākšanas pamācība
FR	Guide de démarrage rapide	LT	Trumpas pradžios vadovas
IT	Guida di avvio rapido	EL	Οδηγός γρήγορης εκκίνησης
ES	Guía de inicio rápido	TR	Hızlı Başlangıç Kılavuzu
PT	Guia de Referência Rápida	SL	Priročnik za hitri zagon
NL	Introductiehandleiding	HR	Kratke upute
DA	Introduktion	MK	Прирачник брз почеток
FI	Pika-aloitusopas	SR	Uputstvo za brz početak
NO	Hurtigveiledning	CA	Guia d'inici ràpid
SV	Snabbstartsguide	RU	Руководство по быстрой установке
CS	Úvodní příručka	UK	Коротка інструкція "Початок роботи"
HU	Bevezetés	AR	دليل البداية السريعة
PL	Przewodnik szybkiego startu	FA	راهنمای سریع برای شروع بکار
SK	Stručná príručka	HE	מדריך להפעלה מהירה
BG	Ръководство за бърз старт	ZHS	設定手冊
RO	Ghid de pornire rapidă	ZHT	設定説明書

[illegible]

 
 
2

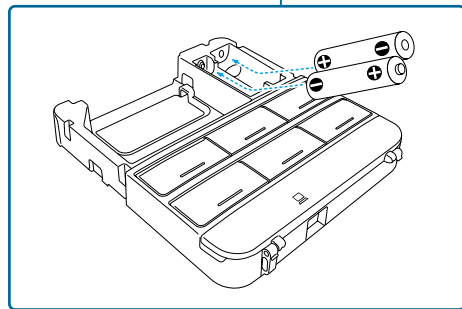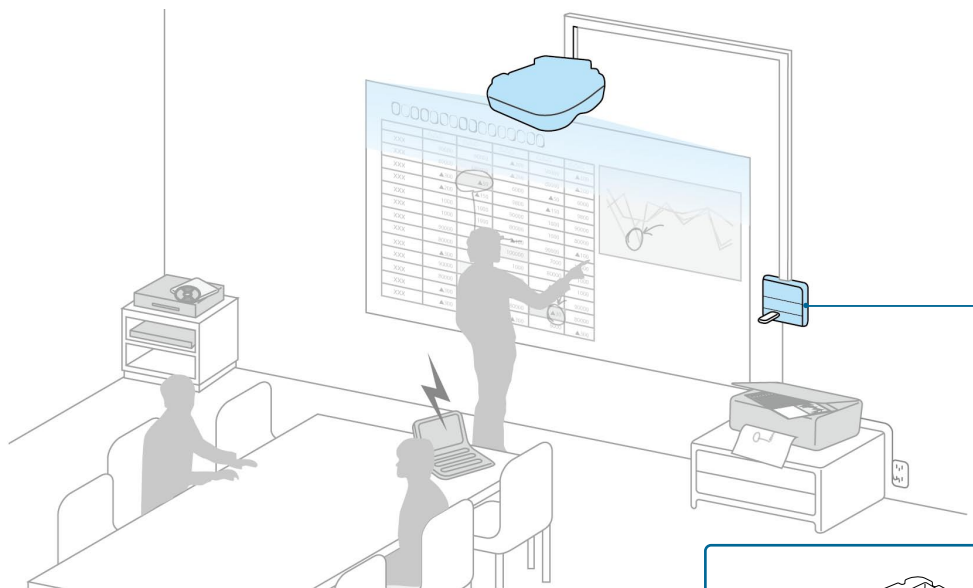


3

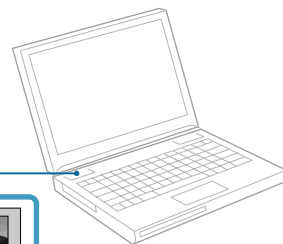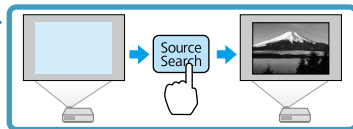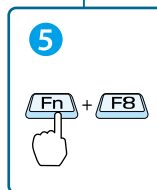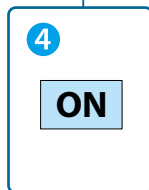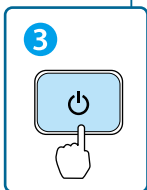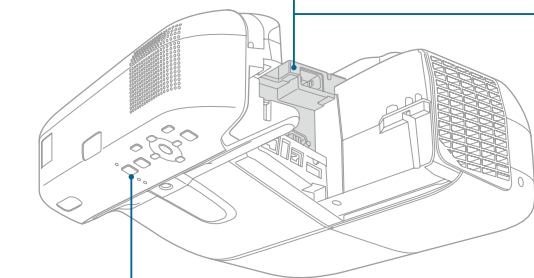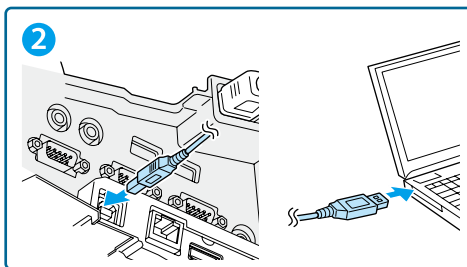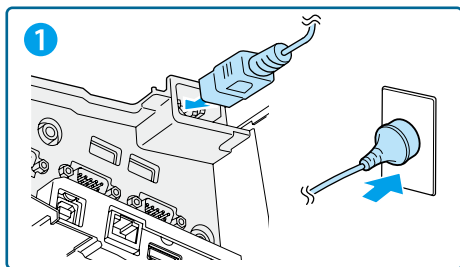        



4

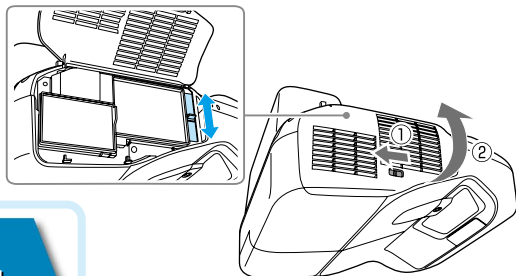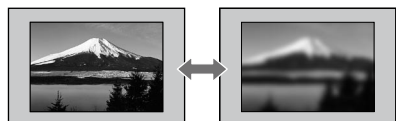  





◀W ▶T▶

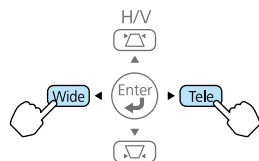 

1


 
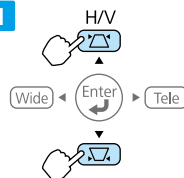 


2

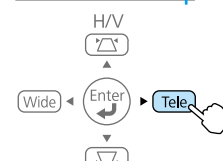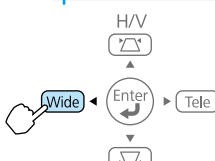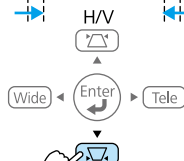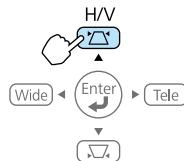    


Easy Interactive Function

   
5

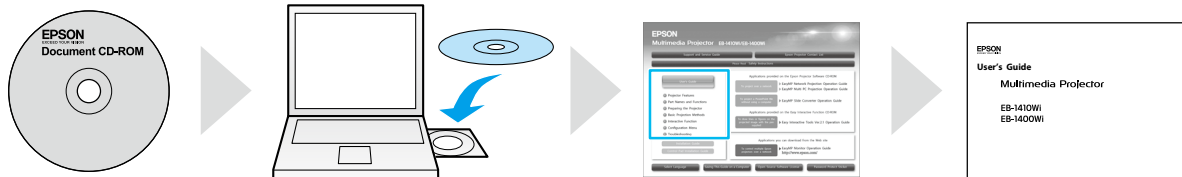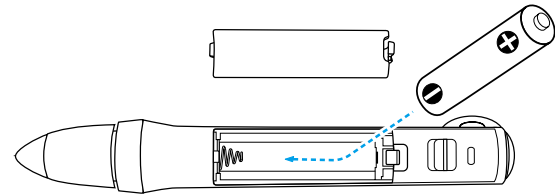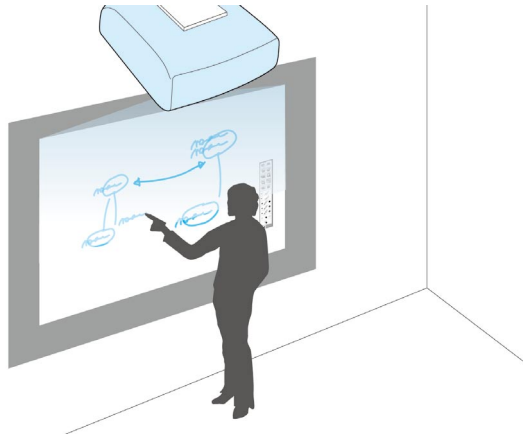



Auto Calibration

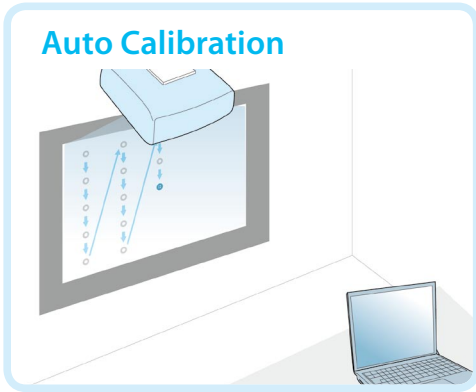 



1

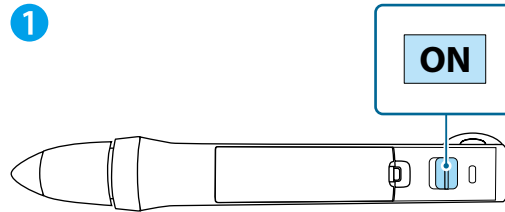 


2

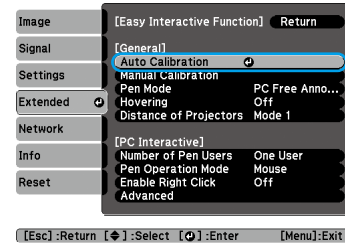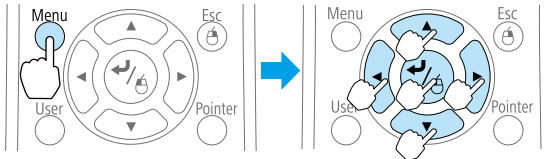  


3

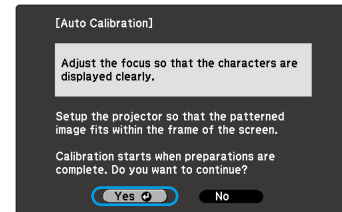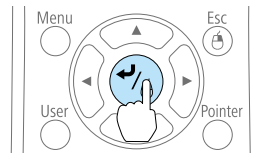  


Drawing (Whiteboard Mode)

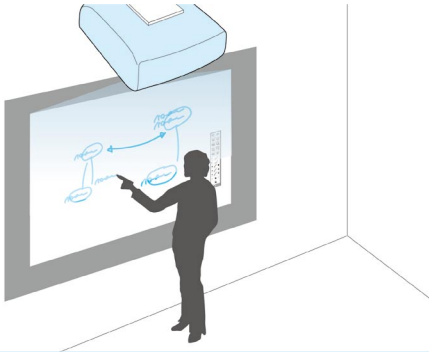 


1

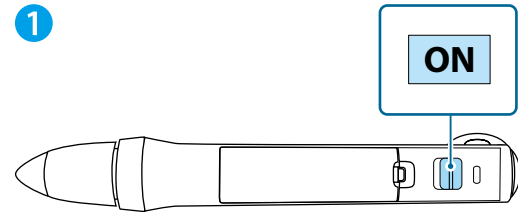 



2

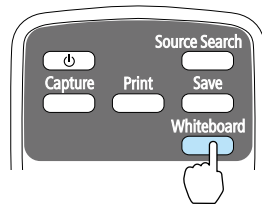 



Drawing (PC Free Annotation)

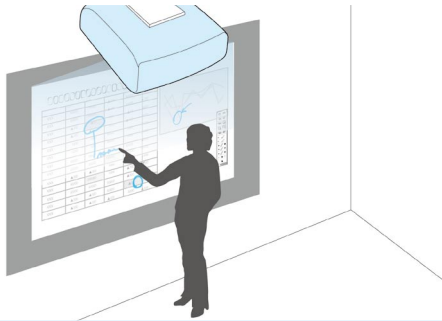 


1

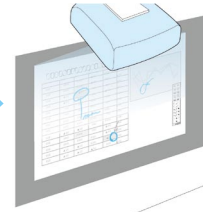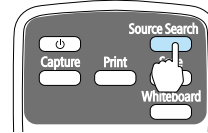  


2

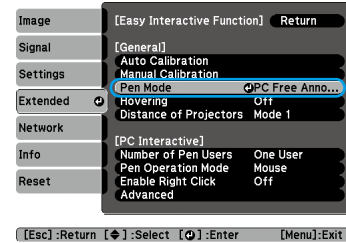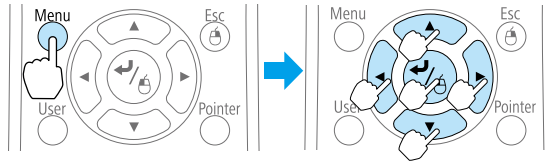  




3

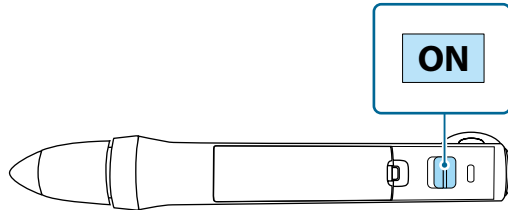 


PC Interactive

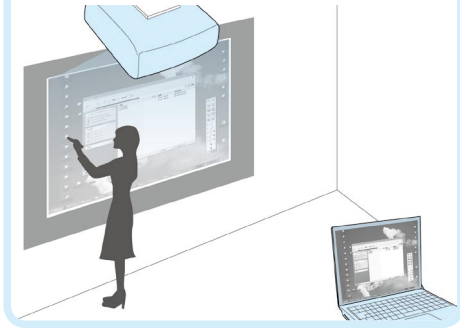 


1

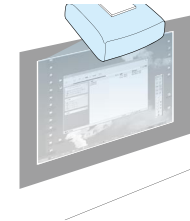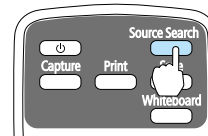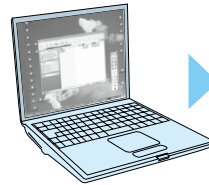   



2

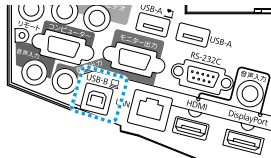 

USB-B

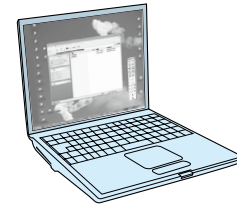 




3

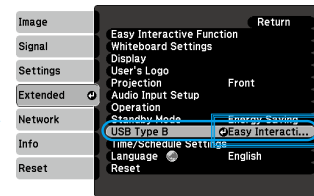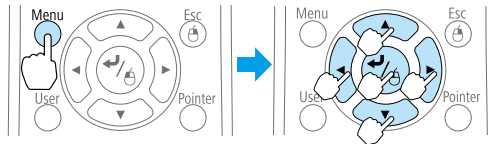  

[Esc]:Return [Enter]:Select [F4]:Enter [Menu]:Exit

   - Easy Interactive Function
- USB Display/ Easy Interactive Function

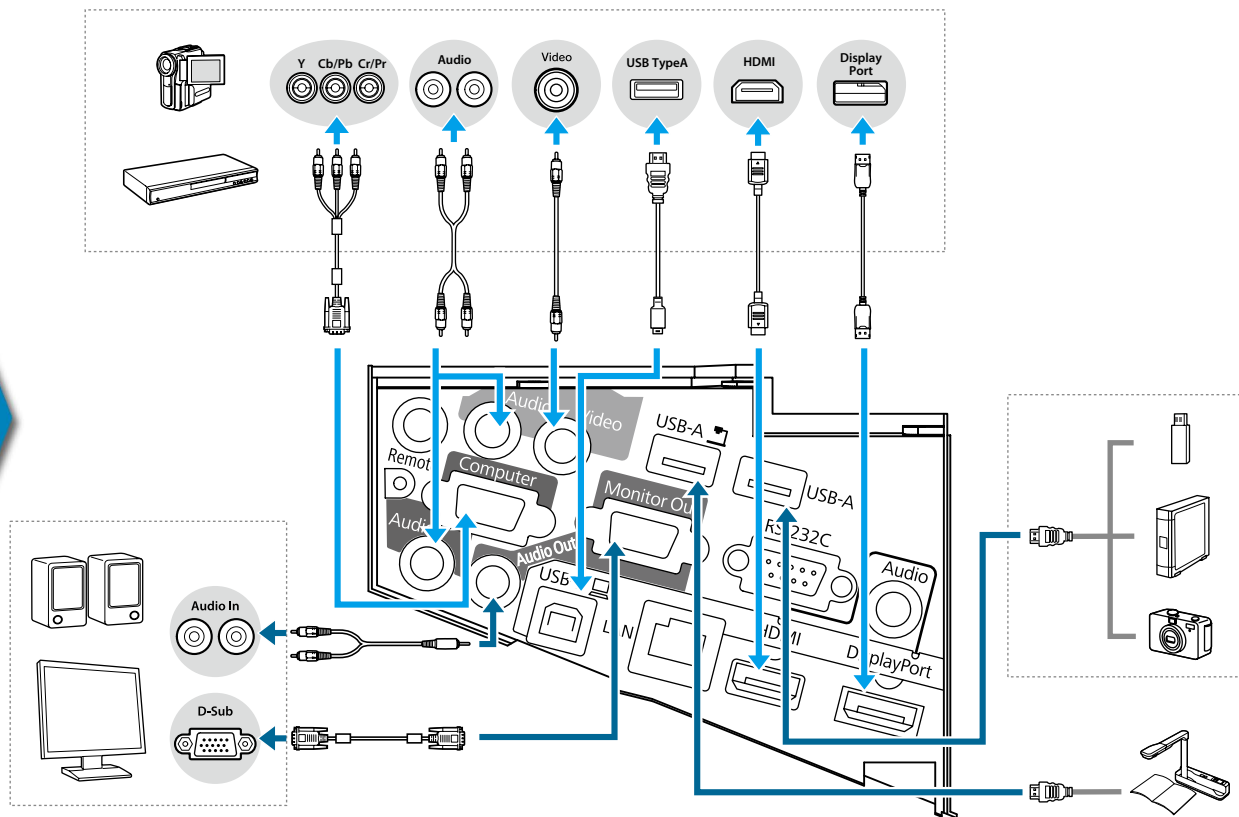

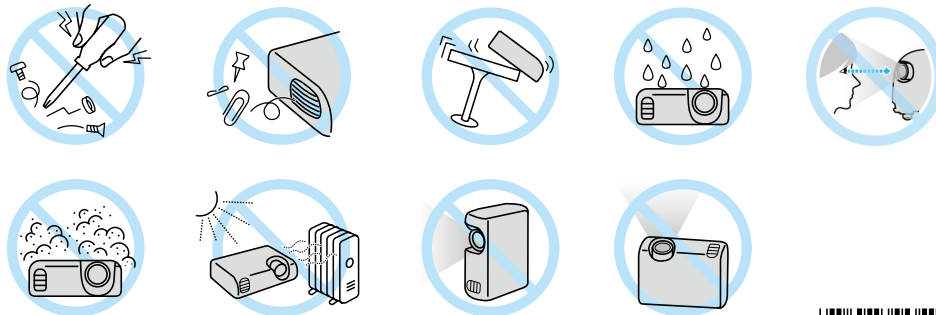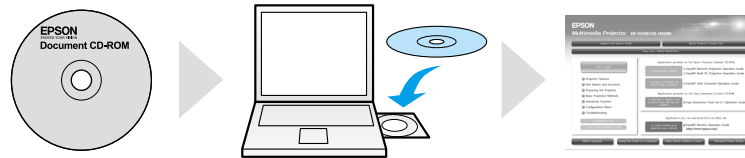

Printed in China
XX.XX-XX(XXX)



412397400